



Technical Service Department

Technical Service Bulletin

1-800-432-8373

HPWH- CONDENSATE SENSOR REPLACEMENT



1. TURN OFF THE POWER TO THE HEATER.
2. REMOVE THE 4 SCREWS AROUND THE EDGE OF THE TOP LID.
3. REMOVE THE 4 SCREWS ON TOP OF THE LID (2 SCREWS ON EACH SIDE OF THE FILTER).
4. REMOVE THE FILTER FROM THE TOP CENTER PORTION OF THE HEATER
5. LIFT LID AND TURN TO THE SIDE.
6. REMOVE THE CONTROL PANEL FROM THE FRONT OF THE HEATER AND DISCONNECT THE SENSOR FROM BEHIND THE SCREEN (THE SENSOR WILL BE THE 2 GREY WIRES IN THE CENTER PLUG).
7. LOCATE CONDENSATE SENSOR IN THE BLACK PAN IN THE TOP OF THE HEATER. THE SENSOR IS WHITE WITH A BLACK STRIPE.
8. STRING THE SENSOR THROUGH THE HOLE TO THE RIGHT BACK TOWARDS THE CONTROL BOARD (SEE BELOW).
9. TO REINSTALL REVERSE ABOVE STEPS.





Technical Service Department


Technical Service Bulletin

1-800-432-8373

HPWH- CONDENSATE SENSOR REPLACEMENT



TAKE THE FILTER OUT THE TOP CENTER PORTION OF THE HEATER

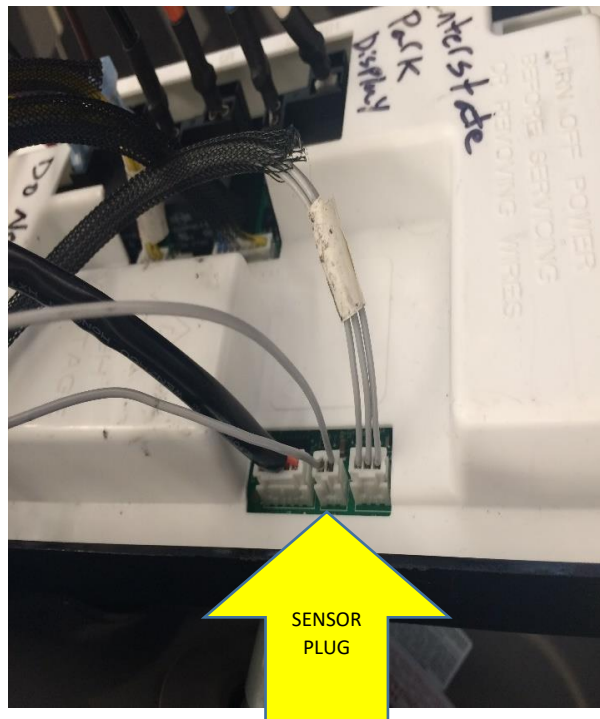

UNPLUG CONDESATE SENSOR FROM THE CONTROL BOARD




Technical Service Department

Technical Service Bulletin

1-800-432-8373

HPWH- CONDENSATE SENSOR REPLACEMENT

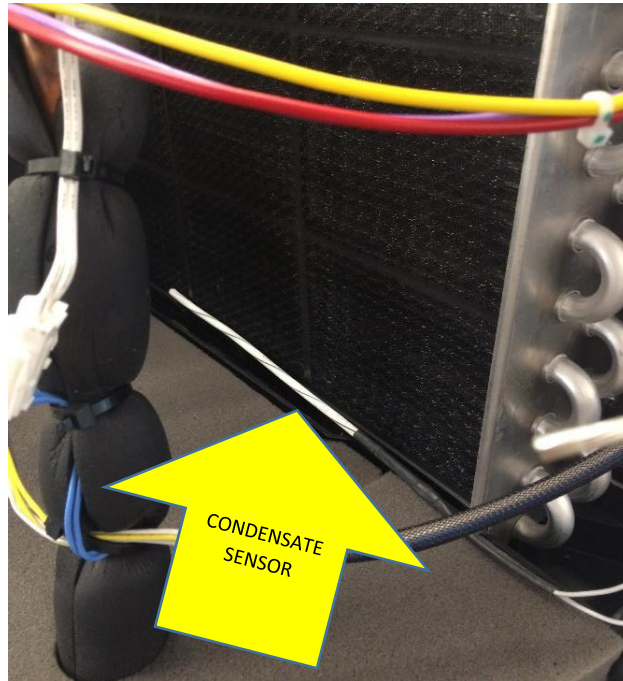

THIS IS WHERE THE CONDESATE SENSOR SITS IN THE PAN



THIS IS WHERE THE CONDENSATE SENSOR IS STRUNG TO PLACE INTO THE PAN